

Addendum for the iS³ User's Guide PPP Connection Procedure Via Modem iS³ (Windows 2000)

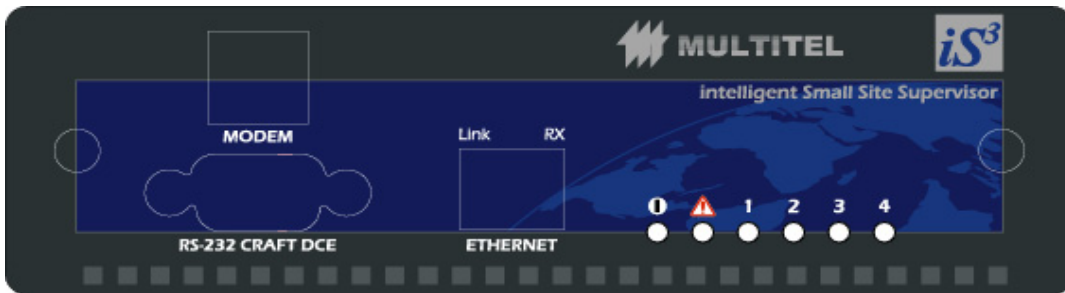


Figure 1 - Front Panel

Three steps are required to establish a PPP communication via modem with the iS³:

1. Create a modem in Windows
2. Create a new PPP connection in Windows
3. Manually establish the connection with the iS³

You don't necessary need to know the iS³ IP address for the following steps.

In the iS³ configuration file, you should enable the **script connection**. Refer to annex 1 at the end of this procedure.

1. Create a modem in Windows

If you already have a modem, jump to section **2. Create a new PPP connection**

Add a standard modem.

- a) Connect a modem to your PC, if there is not already one.
- b) Follow this sequence: **Start + Settings + Control Panel**.
- c) Click on **Phone and Modem Options**.
- d) In the **Modems** tab, verify that there is no Physical Modem already installed. If you already have such modem installed, close this window and jump to section **2. Create a new PPP connection**.
- e) Click on **Add**.
- f) Uncheck the **“Don't detect my modem; I will select it from a list”** box and click on **Next**.
- g) If your PC can't find your modem, follow the installation procedure for your modem.
- h) Click on **Next** and the click on **Finish** and Close with **OK**.

2. Create a new PPP connection

- i) Click on **Start + Settings** and double click on **Network and Dial-up Connections**.
- j) Double click on **Make New Connection** and click on **Next**.
- k) Choose **Dial-up to the Internet** and click on **Next**.
- l) Choose “**I want to set up my Internet connection manually or I want to connect through a local area network (LAN)**”, then click on **Next**.
- m) Choose “**I connect through a telephone line and a modem**”, then click on **Next**.
- n) If you have only one modem installed, do the next step; if not, choose the Modem you've just installed and click on **Next**.
- o) Type the telephone number to dial to the iS³.
- p) Check the “**Use area code and dialing rules**” option, then click on **Next**.
- q) Do not enter any user name nor password and click on **Next**.
- r) Click **Yes** on the two following warnings.
- s) Name your PPP connection (**Suggestion: iS³ IP address on modem port + City name**), then click on **Next**.
- t) Answer **No** to the question: “**Do you want to set up an Internet mail account now?** ” Then, click on **Next**.
- u) Uncheck the “**To connect to the Internet immediately**”, select this box. Click on **Finish**.
- v) Right click on **Start + Settings + Network and Dial-up Connections + IP modem address - City name** and select **Properties**
- w) Select **Security** tab and check **Display Terminal Window**.
- x) Select **Option** tab and Uncheck **Ask For Name and Password**.
- y) Select **Network Gestion** tab and select **PPP Windows...Internet** and press **parameters**, uncheck **Software Compression**.
- z) In the **Network and Dial-up Connections**, right-click on (**IP modem adress + City name**) and select **Properties**.
- aa) Select the **Security** tab.
- bb) Select “**Run script**”.
- cc) Click on **Browse** and search for the script provided by Multitel (Multitel iS³ PPP.scp).
- dd) Select **Network Gestion** tab and select “**Internet protocol (TCP/IP)**”. Click on **properties** then click **Advanced**. Uncheck the “**use default gateway for....**”. Click **OK** 3 times to close the windows.

Now the modem and connection settings are OK.

There is one more setting to do with Internet Explorer:

- Open Explorer
- Select **Tools** and **Internet Option** and finally, **Connection** tab.

Check “**Never set a connection**” and click **OK** and close the windows.

3. Manually establish the connection with the iS³

- Click on **Start + Settings + Network and Dial-up Connections + *IP modem adress - City Name***
- A window will open and the Communication steps will scroll and the iS³ header will appear.
- To verify the IP address, right click on the connection icon on the right side of your task bar, and select **State**, it will open a window, then select **Details**. The iS³'s IP address is the server IP address.

The PPP connection is established.

Launch your Internet Explorer and type the server's IP address (iS³'s comm. Port IP Adress), press **Enter**. You should access the iS³'s web page. Refer to the User's Manual for more details.

Refer to your User's Guide for the procedure to access the iS³ in FTP.

Annexe 1:

Enable the script connection in the iS³;

In the iS3 configuration:

Load the config files of the iS³

Clic Hardware Tab

Clic Unit Name to Extend

Clic iS³-3SH to extend

Clic Communications to extend

Clic Internal modem to extend

In **PPP** tab, section **MODE**, select **Script Connection**

save the config and upload it back to iS³

Annexe 2:

To automate the PPP script connection:

To remove the step where you have the terminal screen and you have to enter “ppp;ok” follow the next steps;

In the **Network and Dial-up Connections**, right-click on **(IP modem adress + City name)** and select **Properties**.

Select the **Security** tab.

Select **Run script**.

Click on **Browse** and search for the script provided by Multitel (Multitel iS³ PPP.scp).

Click ok to close the window.